


Maintenance

Any problems with "slippage" of the mobile plate can be solved by adjusting the belt tension. Acting on the tension in the sequence indicated:

- 1 loosen the screws "A" Block
- 2 tighten the screws "B" in the same way, subject the strap to tension
- 3 tighten the screws "A"

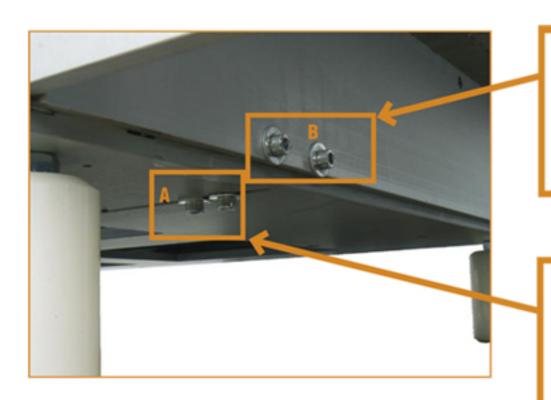

2 tighten the screws "B" in the same way, subject the strap to tension.

1 loosen the screws "A" Block

3 tighten the screws "A"